



3. Control System

Homing to pre-determined floor

If a car or landing call has not been registered for 15 minutes, the lift will 'home' to a pre-determined floor, usually the master or Ground floor.

Upon arrival at the 'master floor' the doors will not open (unless the 'doors parked open' option has been selected) until another landing call is placed.

Door Close Button (quick close of door)

Operation of either a 'door close' button if fitted or a car call button will cause the doors to close and overrides the 'door open' six second timer. If the lift is on 'fireman's control' or 'car preference', the doors will remain open until a car call is registered.

Lift Overload (single set point)

Should the lift be overloaded whilst at a floor level a buzzer will sound and an indicator will illuminate (both fitted into the car operating panel) warning the user. The lift will not operate until the load has been reduced to an acceptable level.