

TB 187

TECHNICAL BULLETIN

SUPPLIER ISSUE – LANDING ENTRANCE BOTTOM FIXINGS

For the Attention of:	Platform Lift Installers
	Platform Lift Trade Customers
	Technical Support Engineers
Date:	20 th July 2022
Product:	Stannah Midilift Piccolo – 900mm wide entrances only (1100mm x 1400mm cabins)
Subject:	Landing Entrance Bottom Fixings

Originator: Platform Division, Engineering Dept, Gate 1, Stannah Lifts Ltd, Watt Close, Andover, Hants SP10 3SD


Introduction:

It has become apparent that some Piccolo Fermator landing door entrance sills have been supplied with an incorrect component.

The incorrect component is the baseplate which supports the aluminium landing door sill. This component should have 4 fixing points for attaching the bottom architrave brackets to the building (as shown below) but has been supplied incorrectly with only 3.

Note: This technical bulletin only relates to Piccolo models with a **900mm wide landing entrance** i.e. Piccolo models with cabin size 1100mm x 1400mm. Stannah part numbers for the landing entrances affected are 511150 and 511152.

Piccolo models with a smaller cabin size have an 800mm wide landing entrance are designed to only have 3 fixing points and are not subject to this technical bulletin.

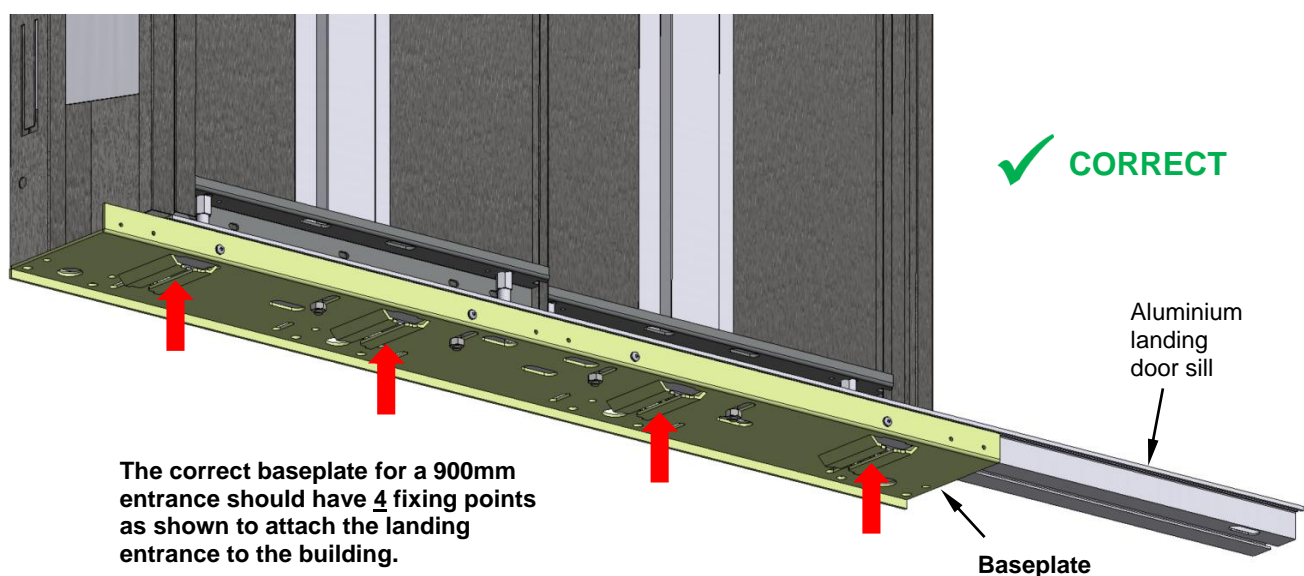

Corrective Action:

Installations where Piccolo **900mm** wide landing entrances *have not* progressed beyond 1st fix (not built-in):

If inspection of the baseplate confirms that it only has 3 fixing points for the architrave brackets then it must be replaced with the correct baseplate with 4 fixing points.

Unscrew the fixings securing the incorrect baseplate and replace with the correct version in the same location.

Installations where Piccolo **900mm** wide landing entrances *have* progressed beyond 1st fix (are built-in):

The baseplate does not have to be replaced.

The customer will be asked to check the different load condition now imposed on the building, to that shown on the corresponding Builders Work Drawing.

Reference Documents:

Midlift Piccolo Installation Guide Sections: 14 Landing entrances – intermediate & upper
30 Landing entrance – bottom floor